

moxiam[®]
every moment counts



Welcome to Moxiam









Setting up your Moxiam system can be perceived as difficult or easy depending on one's experience with similar installations. Our aim is to make it as simple as possible for all users. If you encounter difficulties, do not hesitate to contact our support team, and we can schedule a time to assist you with the installation.

Email: support@moxiam.com

Support phone: 010-888 73 66

To make it work, you need to download the Moxiam app on your phone and set up the Moxiam system in the residence where the system will be used.

Contents of the Moxiam Kit

Gateway	Power Connection	USB Cable	Ethernet Cable	Door-sensor	Motion-sensors
					
1 unit	1 unit	1 unit	1 unit	1unit	5-10 units depending on chosen system

Installation instructions for the system

1. Download the app.
(Search for Moxiam)



2. Take out the central unit from the box and screw on the orange antenna



3. Connect the central unit to the home internet router using the provided Ethernet cable



4. Plug in the power cable into the central unit:




When the two green lights on the central unit are green, the system is connected to the app. This may take a few minutes.



5. Install the motion sensors in your home

The sensors are labeled with tags describing which room they should be placed in. If the room names don't quite fit, you can change them later in the app settings.

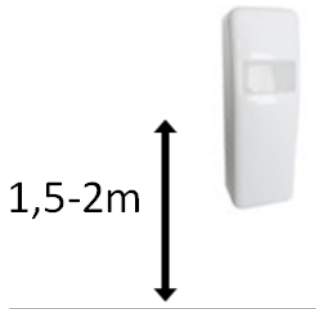

When choosing the placement of the sensors, try to consider three principles:

1. Aim to position the sensor to cover the entrance to the room it is placed in.
2. Avoid having multiple sensors covering the same area.
3. Put the sensor at a height of 1.5 to 2 meters.

Set up each sensor in the type of room according to its label. For each sensor, remove the protective cover from the adhesive tape on the back of the sensor and attach it to a suitable location following the principles above. Avoid attaching to wallpapers, as it may damage the wallpaper if the sensor needs to be removed. A door frame might be a good location.

When you move in front of the sensors, they should blink green, and then turn off.

6. Install the door sensor in your home

The door sensor should be placed on the front door.



Pick up the door sensor (two parts).

Depending on the construction of the door, it may be a bit challenging to find the best solution for mounting the sensor parts. Experiment without removing the protective cover from the adhesive tape. When the door is closed, the two sensor parts should be close to each other, and when the door is opened, the distance between them should increase.

Then a blue light will turn on in the larger part. Once you have decided on the placement of the sensor, remove the protective cover from the adhesive tape and attach it to the door and the door frame, respectively.

Now the system is configured and ready to use!